


Slide installation

Mounting full-extension runner on cabinet side

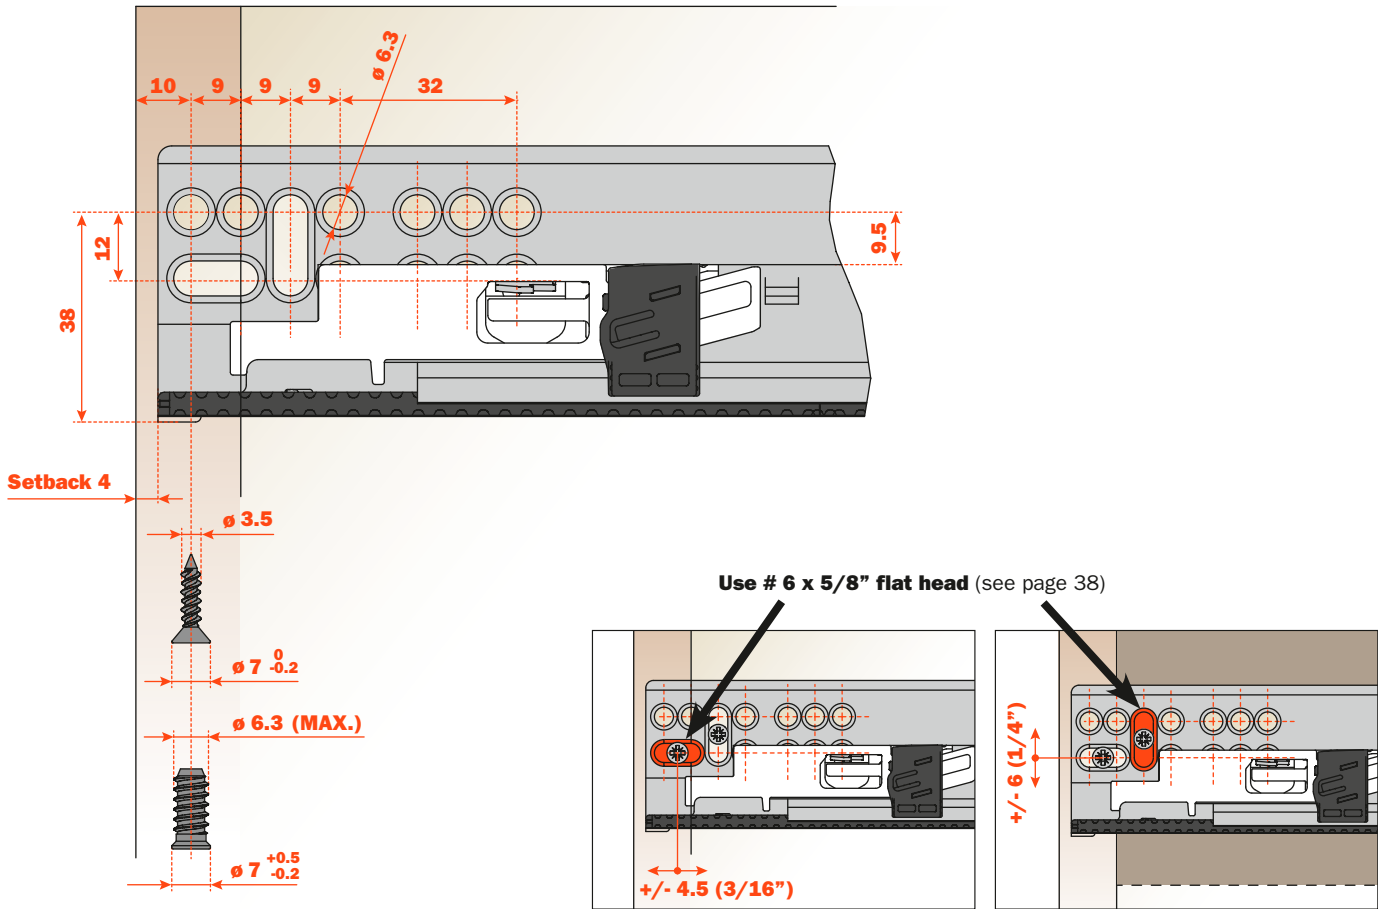


See **screws**, page 38.

Elongated holes are for ± 4.5 (3/16") **depth adjustment** only. Additional screws must be used to secure the runner to the cabinet.

Elongated holes are for ± 6 (1/4") **vertical adjustment** only. Additional screws must be used to secure the runner to the cabinet. Only with frameless application or face frame application with filler.

Drawer slide assembly Face frame application without filler behind frame

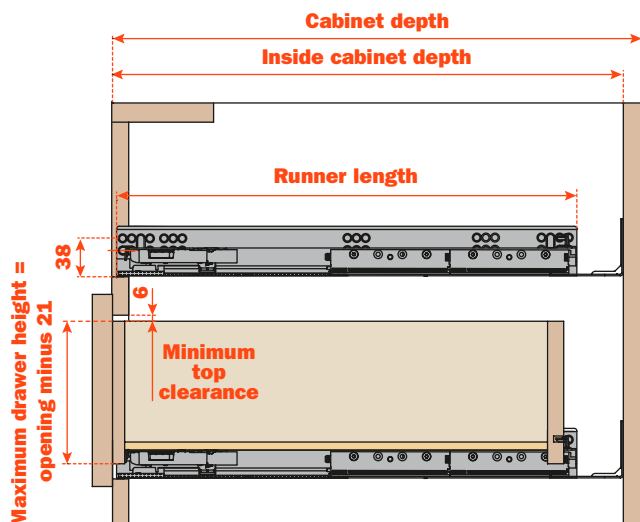

Drawer slide assembly Face frame application with filler behind frame Frameless application

